



CP600BMW Pro Audio Player

Quick guide

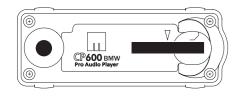

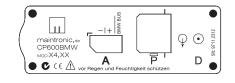

Art.no.: Model Version:	15.600 X4
Document number:	15.600_B02_V05_EN
Creation date:	09 / 2016

CP600BMW folder-structure


Main-folder

The main-folder represent the numbers of CD's in the BMW-stereo. The CP600BMW creates the title-list automatically.



Nested sub-folders

Sub-folders are privileged to group titles for playing. File-names and sub-folders are coequal when it is about the order. Files are played in an alphabetic sequence.

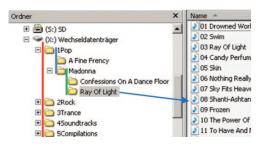

Scope of delivery

- CP600BMW Pro Audio Player
- Montage kit which consist of:
- 2 adhesive brackets, 1 special cable-strap EN quick guide

Installation hints



For your own safety take care about the operation of the CP600BMW while driving, please. It might distract you from traffic conditions and thus can cause an accident

Manage the CP600BMW only if the traffic situation allows it. Do not get refracted by the device. The rules of traffic regulations have to be kept in your mind.

Note

This quick guide is thought to give the user a quick help during the installation and for the operation of the CP600BMW. A complete and detailed user manual can be found in the Internet: www.maintronic.de/dl/AudioPro/CP600BMW

maintronic assumes no liability whatsoever for any technical or editorial mistakes in this guide, as well as for damages resulting from the operation or the use of this manual

2

Playlist sub-folders


Files which belong the the M3U playlist can be placed elsewhere in the storage-card.

Advanced operation



If the Display shows CD- and title-number, then the device is in normal-mode= (trackmode) active. When pushing the

CD-button the folder-mode is active as long as the folder-name is displayed

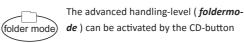

Folder-jump

Main-folders are directly switched by pressing the CDbutton 1 (from 6) activated. The first letter of the six main-folders is in the display ignored and assigned to the buttons 1 - 6.

Sub-folder-jump

Repetition push of the active CD-button in *foldermode*, scrolls the available sub-folders from top to bottom, First the folder is show in the display, (as CD) after 4 sec. CD with titlenumber > (CD1-01). If now pushing the active CD-button, then for control the folder is shown (foldermode), before scrolling can be continued.

BMW and the BMW Logo [®] are rights and properties of the BMW AG in Munich / Germany CP600BMW is a product of maintronic[®]GmbH All rights reserved |www.maintronic.de Support: support@maintronic.de

Installation Notes

Choose a dry installation location, where you can reach the CP600BMW comfortable from ahead or from front. If you're not sure about the installation in your car, ask your BMW garage.

Before you install the device, check if all connections are correct and whether the device is fully functional. Finally hold the greaseless splices for the brackets ready. The adhesive brackets should be assembled above and around the corner.

For safety the cable-strap have to be tighten through the brackets and around of the CP600BMW.

Installation

Handling

Delete a track

Plug the following BMW-connectors into the desired sockets (with the nib in direction of the line-mark - see figure 1):

Analog Soundsystem: Socket P and A

Digital Soundsystem: Socket D and A The handling and functions for starting, mode switching or exit plus the basic Play-functions (Next, Fast-forward, Fast-backward and so on) accord to the standard-handling of the BMW car stereo.

The handling and functions for starting, mode swit-

ching or exiting plus the basic Play-functions (Next,

standard-handling of the BMW car stereo.

Fast-forward, Fast-backward and so on) accord to the

Actual title can after the switching from *trackmode* to

foldermode be deleted. If pushing the shown CD-main-

folder button it leads to the *foldermode*. The folder-

deletion can be introduced with the previous

in the display. All following titles rise their ranks and

ID3-TAGs like "Artist", "Album", "Trackname" or

"Tracknumber" can selective displayed out of the MP3

The ID3-TAG Information can be forwarded to different

displays by editing the CP600.ini. Following displays are

• Main title panel – TAG_TF (folder and title are

• IKE speedometer combined instrument - TAG_IKE

preset plus artist and album)

the next track is played in trackmode.

ID3 Tag visualization

file if possible.

possible:

Display options

button. has to be pushed until DELETE is shown


name is shown for 4 seconds, during this time the


3


8

Overview about the elements and connectors

- Status LED 1
- 2 Storage Card slot
- Rear connectors
- 12V DC Power /BUS Input Ρ
- Stereo Analog Output А Stereo Digital Output
- D

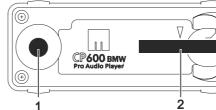

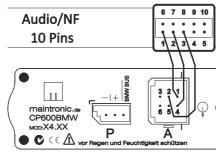


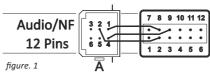

Tags artist, album and song title are one by one shown as possible


• NAVI/Boardmonitor in Index-panel - TAG_INDEX row 1 \rightarrow title, row 2 \rightarrow album, row 3 \rightarrow artist, row $4 \rightarrow$ tracknumber, later CD-main-folder number with name

Following pictures shows the different Visualization possibilities and TAG descriptions graphically.

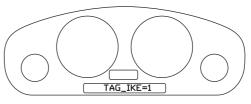



BMW Professional Radios

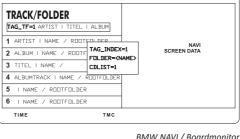

6

7

AUDIO

Operating status

The status LED (1) shows the operating status of the CP600BMW. The LED can assume the colors red, green and yellow. Following overview shows all operating status of the CP600BMW.

1	Status-LED	Operating status
0	Off	Sleep mode (or no Power)
•	Yellow	no SD-Card plugged in
•	Green	Ready (no playing)
•	Red	no audiofiles (or. playlists) found
*	flashing slowly green	playing in trackmode active
\times	flashing slowly yellow	playing in playlistmode active
☀	flashing yellow/green	creating Index
☀	flashing red/yellow	Card (or Communication error)
	flashing green/red	no playable tracks found, tracks faulty
۲	flashing fast green	Card write protection is active
۲	flashing fast red	firmware update is in progress

BMW operating display

Following messages can occur during operation.

CD Check	Indexing is in progress
No Magazine	No card found in card-slot (2)
No Discs	Lock / Writeprotection is activated
	(1) green fast blinking.
	E

Memory-Card	~ 32 GB SDHC / SD / MMC (formatted with FAT32)	th FAT32)
Fileformat	(.MP3) Layer III (always 44,1kHz) 32 up to 256 Kbps; (.WAV) - 16 Bit PCM stereo;	› 256 Kbps;
DSP / DA Convertrer	248ht Stereo sampling-rate: 44,1kHz (16kHz~96 kHz) 18Hz~ 20kHz +/- 0,02dB S/N A=> @ 92dB	12~96 kHz)
Power consumption with card	Playmode	50 mA / 0,6 W
Duo LED	Device:	Card status: Write-protected; Track-/ or playlistmode;
Display	Ready, Play, Sleep,	No audiofiles; Update in progress; Indexing in progress; Failure
	Input: 3 pin. 12V Power + BMW I-Bus	
CONTECTIONS (BMMM conform)	Audio Outputs: (A) 6 pin.: R / L Analog Audio and	udio and
	(D) R / L Coax isolate Digital	
Weight (gramm)	ca. 150g	
Enviroment	-35C° +65C°	
Dimensions	78x30x69mm	
Housing	extruded aluminium sheath	
ייכום לימר מיום	Replacement of the BMW CD-Changer	
riug anu riay Analization:	as additional Audio-Device (required adapter cable hardware):	oter cable hardware):
	BMW radio: MODE-button (CD-button): customized cableset	customized cableset















9

2012

GmbH

onic

0